

3-1/2" Resistance Pile

3-1/2" Resistance (Push) Pile System (patent pending)

The resistance pile is installed by excavating sufficiently to access the base of the foundation. The one-piece ductile cast iron bracket is placed underneath the bottom of the foundation and secured with bolts. The drive stand with hydraulic cylinder slides into the bracket.

A lead collar fits into the bottom end of the first pipe section. This lead collar displaces the soil during installation. The 42" length pipe pile with lead collar is driven into the soil with the hydraulic cylinder. The structure provides the reaction force to drive the pipe sections. Extensions are added until the required resistance force is reached.

A jack is used to stabilize to remove any slack or to lift the structure as required and then secured in position with a threaded locking bolts. Complete installation instructions are provided.

The resistance pile is best used where bedrock or very dense soil is located near and below the foundation base. Typically installed to 14 ft depth. For greater depths extensions are added.

Ordering Information

Catalog #	Pipe Pile Size O.D. inches	Description	Standard pack Qty	Coating	Working/Ultime capacity Lbs
R3500-K14	3-1/2"	Kit –complete bracket with 14 ft of pipe pile	8 sets	Black	42,500/85,000
R3500-42C	3-1/2"	42" extension	24	Black	42,500/85,000

R3500-K14G	3-1/2"	Kit –complete bracket with 14 ft of pipe pile	8 sets	Black	42,500/85,000
R3500-42CG	3-1/2"	42" extension	24	Galvanized	42,500/85,000

Note: * Pipe Pile sections hot dip galvanized to ASTM A-153; Bracket, lead, guides and T-pipe black

** Pipe pile sections hot dip galvanized to ASTM A-153




Building Solid Foundations

11411 Addison Avenue • Franklin Park, IL 60131

T: (847) 455-0014 F: (847) 455-0029 • www.macleandixie.com

3-1/2" Resistance Pile

Installing Resistance Pile

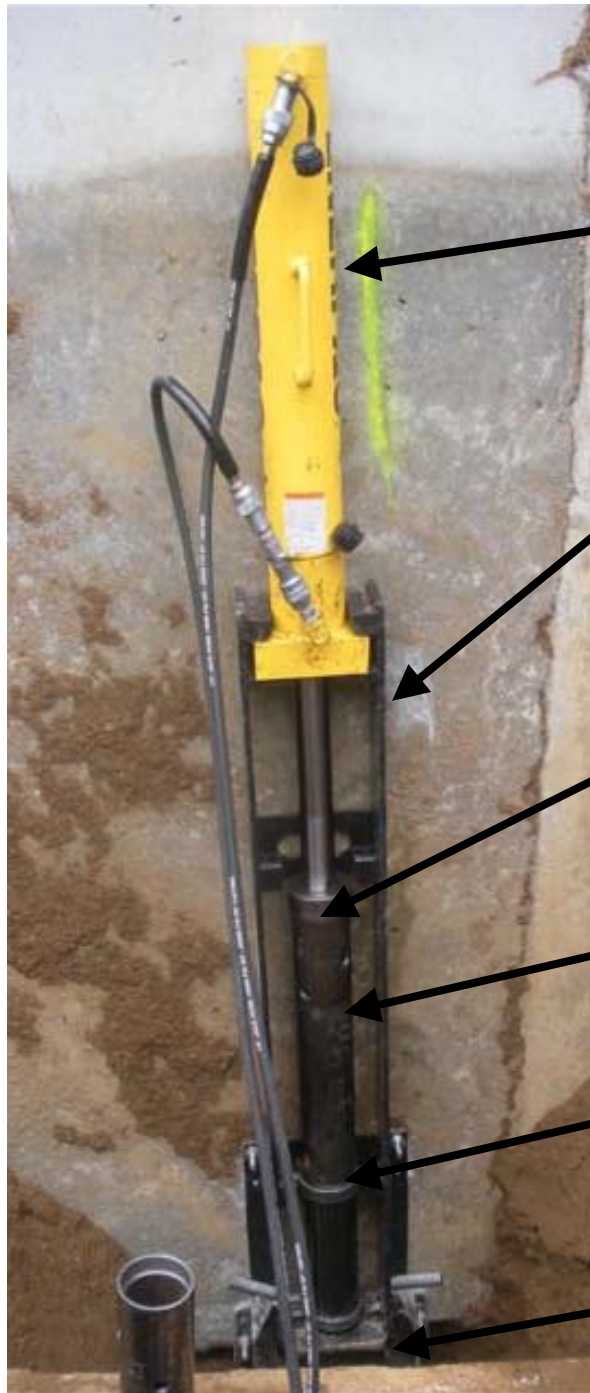

Hydraulic Drive Cylinder to drive (push) the resistance pipe pile sections into the ground.

Drive Stand supports the hydraulic cylinder and connects to the foundation bracket

Drive Cylinder Adapter to couple the cylinder ram to the pipe pile

Pipe pile driven with cylinder

Pipe Guide to maintain alignment during installation

Foundation Bracket bolted to the foundation base



Building Solid Foundations

11411 Addison Avenue • Franklin Park, IL 60131

T: (847) 455-0014 F: (847) 455-0029 • www.macleandixie.com

3-1/2" Resistance Pile



A kit consists of complete (includes bracket, hardware, one pipe with lead collar and 3 extensions with crimped-on coupling to complete 8 pile installations to 14 ft installed depth.

Pipe sections shipped in standard 24 piece bundle.



Couplings are crimped at one end of each pipe pile



Hydraulic jack used to lift the structure



Building Solid Foundations




11411 Addison Avenue • Franklin Park, IL 60131

T: (847) 455-0014 F: (847) 455-0029 • www.macleandixie.com

3-1/2" Resistance Pile

Tools required to install 3.500" Resistance Pile

Item #	Catalog Number	Qty	Description	Can also be used with 2.875" resistance pile
1	RDS1	1	Hydraulic Cylinder Drive Stand	Yes
2	R3500-Guide	3	3.500" Pipe Guide	NO
3	R3500DA	1	Drive Cylinder Adapter	NO
4	R3500DT-21	1	21" Drive Tool	NO
5	R3500DT-12	1	12" Drive Tool	NO
6	RLH-1	1	Lifting Hardware	Yes
7	RCYL1	1	Hydraulic Drive Cylinder (Capacity = 40 tons)	Yes
8		1	Lifting Cylinder (Note: supplied by others)	Yes
9		1	Hydraulic Pump (Note: supplied by others)	Yes

  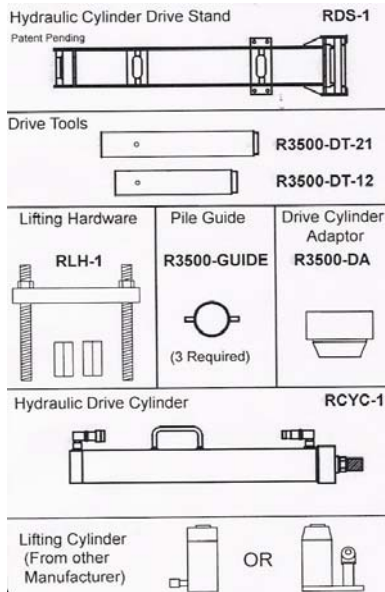

Building Solid Foundations

11411 Addison Avenue • Franklin Park, IL 60131
 T: (847) 455-0014 F: (847) 455-0029 • www.macleandixie.com